

IN-14 6-Tube Digit NIXIE Clock Quick Setup Manual V1.0

Version: 1.0. (09-09-2014).

Download product documentation and the related software at:

<http://vfdclock.jimdo.com>

You can contact me via email:

zjjszhangf@gmail.com



Contents

Notice:.....	1
Specifications:.....	1
Features:.....	1
Turn Power ON/OFF.....	2
Turn LED ON/OFF.....	2
Quick Start Guide for setting up the current time.....	3
Switch display mode and change settings	3
1. Time Display Mode.....	3
2. Date Display Mode.....	4
3. Temperature Display Mode (Optional)	4
4. Alarm Display Mode	5
5. Auto Power ON/OFF Display Mode	5
6. Timing related Setting Mode (Optional)	5
7. Misc Mode	6
7. Version Display Mode.....	6
About the noise.....	6
Infra Red (IR) Remote Controller functions:.....	7
6-Tube Digit Nixie Clock Operations Cheat Sheet	8

Notice:

In order to drive the NIXIE tube, some internal equipments are under the High Voltage (up to 180V DC), please do not use this clock outside or in any wet conditions, please do not touch any part inside the clock when power supply is turned on. Always keep it away from kids.

Specifications:

Tube Name: IN-14 (Made in the U.S.S.R.)

Tube Diameter: 18mm;

Tube Height: 55mm (approx including glass nipple);

Digit Height: 17mm;

Digit Width: 10mm;

Clock Supply: 5V DC via MINI-USB;

Max Current: <=850mA;

Clock Size: 210mm (L) * 56mm (W) * 15mm (H) (*68mm (H) with IN-14 tube installed);

PCB Size: 186mm * 45mm;

PCB Color: Black;

Weight: 218g;

The clock works with any standard USB supply, use only high-quality adapter!

Features:

- 1) .5V **Mini-USB** powered, easy to be used. Can connect to your computer's USB plugs directly (*In some computers you may need to use the USB Cable that Have Two USB Connectors at the End.).
- 2) .High efficiency circuit and separated HV supply structure make the Clock **less heat** and **very safe**. We use 7 individual small transformers to drive the 6 tubes and 4 middle dots, each provides 3mA Max HV power output only which is pretty safe than regular one HV DC-DC supply solution;
- 3) .All **SMT** components, very **thin** PCB, only 8mm (max) high with the Top & Bottom components; **Static driving, No Blue Dot, No Flashing, High Brightness;**
- 4) .Support **12H** or **24H** display modes, can show "." as "A/P" in 012H time format. **Leading zero** blanking is programmable.
- 5) .Display date in **all format**: YY.MM.DD or DD.MM.YY or MM.DD.YY or even MM.YY.DD; Can display week info too.
- 6) .Support 7 different Effects: **Normal/ Fading/ Cross Fading/Slow Fading /Flash /Loop /Random Loop** for displaying time. All the segments in the IN-14 tube can be lighted up, include the **Left & right dots;**
- 7) .High accuracy RTC inside, factory calibrated to ± 5 ppm, **± 13 seconds (Max) per month.**
- 8) .Simple setting by using **3 buttons** only and supports **IR remote control (optional)**.

- 9). **Three alarms** with weekends ON/OFF support can be controlled individually.
- 10). **Three programmable Auto Power ON/OFF** mode, can turn ON/OFF NIXIE tubes in any time you want. This function can save tubes life.
- 11). **.8-level adjustable NIXIE tube bright** with **Auto-brightness** feature (its ability to adjust the tube brightness depending on the current environment).
- 12). **Rechargeable Backup Battery** or **Farad capacitor** keeps RTC running during power outages.
- 13). **Tri-colored RGB LED** mounted under the each NIXIE tube. These LEDs can display different colors at the same time, with a lot of pre-defined auto colour change effects.
- 14). Store user settings in **non-volatile memory**.
- 15). Beautiful CAD designed **acrylic case** made using a laser cutter makes the clock look beautiful. You can assemble/disassemble the case by using only 4 screws on the bottom of the case. The case also has **4 bumpers** as feet on the bottom of the case in order to stop to prevent case's damage.
- 16). Can install **Temperature Sensor(optional)** ;Can install **433M wireless module(optional)** for receiving the outside info, like the wireless temperature sensor's data and the GPS time sync data, etc.

Turn Power ON/OFF

When you plug the MINI-USB with power supply to the clock, the clock will turn on automatically, with NIXIE tube displays current time with the LED running in breathing mode.

In this mode (**[Time display mode]**), press and keep the **[+]** and **[-]** button down then single click the **[SET]** button, you can turn the clock **[soft power on/off]**. When you turn the clock power off, the HV supply will shutdown, and the LED will turn off, but all the Alarms and Auto Power ON/OFF and RTC functions will still be running;

*Let the clock face to you, the left button is **[SET]**, and the middle button is **[+]**, the right button is **[-]**.

Tips: When you turn the clock **[Soft power Off]**, and you want to peek the time, you can just single click the **[+]** or **[-]** button, the clock will turn on for about 3 seconds and will turn off automatically.


Turn LED ON/OFF

In **[Time display mode]**, single click **[SET]** button will switch the LED in Play/Pause/OFF modes.

Tips: You can control the LED(s) individually, even in the **[soft power off]** mode.

Quick Start Guide for setting up the current time

When the power on, the clock displays the current time. If the time it displays is not correct, you need to set it by yourself. Here is the quick guide for you to set the current time.

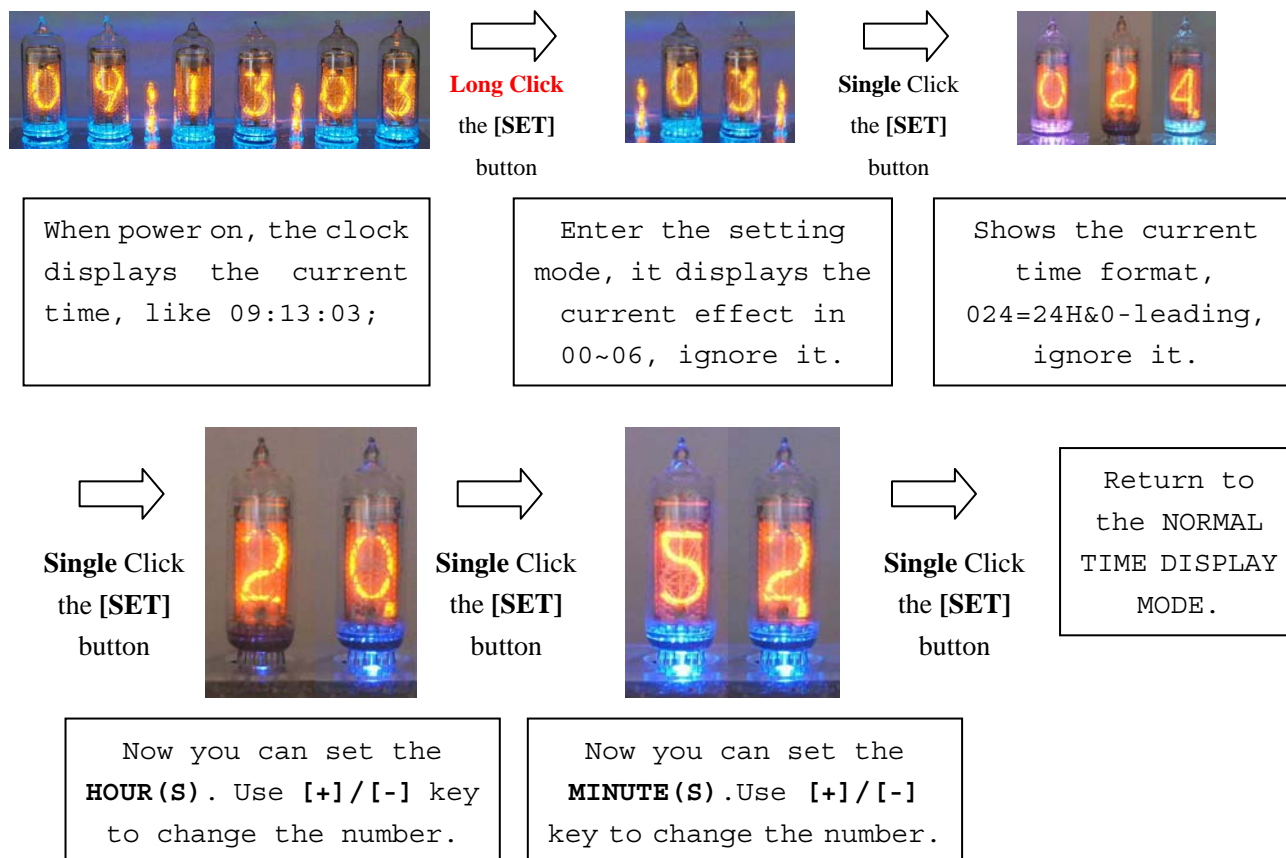

Switch display mode and change settings

1. Time Display Mode

After power on initialization, the clock will display the current time in [HH.MM.SS.] format, where [HH.] is the current Hours (in 00-23 or other range/style, depends on the time format you have set), [MM.] is current Minutes (in 0~59), [SS.] is current Seconds (in 0~59).

In this mode, after press the [SET] key down for at least 2-sec(Long Click), it will switch to the time related setting mode, and you can short or long click the [+] and [-] buttons to change the value, and single click the [set] button to switch to another settings.

In this setting mode you can set:

[Display Effect: xx]: 00:Normal/ 01:Fading/ 02:Cross Fading/03:Slow Fading /04:Flash /05:Loop/06:Random Loop;

[Time Format]:24 (24H without 0-leading)/024 (24H with 0-leading)/12 (12H)/012 (12H with 0-leading)/ [.012] (12H with dot as PM);
[Set Hour]: set time hour in [0~23];
[Set Minute]: set time minute in [0~59];

*if you changed the time value (hour and (or) minute), the second will be reset to 00 automatically.

Tips: For saving the tubes life and to prevent the cathode poisoning, recommend you set the clock to the [06: Random Loop] at least one day per month.

2. Date Display Mode

When in the **[Time Display Mode]**, if you click the **[+]** button you can switch to the **[Date Display Mode]**. In this mode the tube displays date in preset format, like DDMMYY/MMDDYY/YMMMDD/YDDMM. The year displays with left and right dots all light up, the month displays with right dot light up. And the week displays in one single digit;

eg: In **[MMDDYY]** format, the date shows like **[0.5.01.1..4.]** which means May.01,2014;

You can long click the **[SET]** button to switch to another settings, which you can set:

[DATA Format]:DDMMYY/MMDDYY/YMMMDD/YDDMM, display in actually date info;

[Set Year]: set year in [2013~2099];

[Set Month]: set month in [01~12];

[Set Day]: set day in [01~28, 29, 30, 31], depends on the year and the month that you have set.

*Week will be calculated automatically;

*After you finished setting all the values in this mode, you will return back to the current display mode, then you can single click the **[+]** button to switch to other mode, or single click the **[SET]** button to return the **[Time Display Mode]** immediately.

3. Temperature Display Mode (Optional)

When in the **[Data Display Mode]**, if you click the **[+]** button you can switch to the **[Temperature Display Mode]**. In this mode the tube displays the temperature got from the DS18B20 sensor.

eg: The temperature date shows like **[26.58 .0.]** which means 25.68° C or ° F (if the last number shows [.1.]), depending on the unit you have set; If the clock has no DS18B20 sensor installed, it shows 00.00;

[Temperature Unit]: temperature display unit, [0] for ° C, [1] for ° F ;

[Temperature error adjustment]: adjustable temperature display error adjustment value, +-0.1° C per step. The left dot will light up when set a negative value;

Note: This Mode may not exist in the early versions with no

DS18B20 sensor installed!

4. Alarm Display Mode

Same, click the [+] button, switch to the **[ALERT DISPLAY Mode 1/2/3]**;

The clock supports 3 individually alarms with weekends ON/OFF;

[.1.1 HH.MM.]/[.00.]: displays the first alarm information. The first [.1.] means "alarm", the next 1 means "alarm 1"(for alarm2/alarm3 shows [.1.2]&[.1.3]), the hh & mm shows the alarm time in hour : minute, the last [.00.] shows whether the alarm is Enable([.01.] / Disable[.00.]

Long click the **[SET]** button for setting the alarm information:

[Set Hour]: set alarm hour in [00~23];

[Set Minute]: set alarm minute in [00~59];

[Set Alarm Option]: 00(Alarm OFF)/01(Alarm ON)/02(Alarm ON-except weekends).

5.Auto Power ON/OFF Display Mode

Same, click the [+] button, switch to the **[AUTO POWER ON/OFF DISPLAY Mode 1/2/3]**;

The clock supports 3 programmable Auto Power ON/OFF mode;

[.2.1 HH.MM.] / [HH.MM.]: displays the Auto ON/OFF mode and the index num. The first [.2.] means "Auto Power ON/OFF mode ", the next 1 means " Auto Power ON/OFF 1"(It shows auto2 and auto3 mode like [.2.2]&[.2.3]).

And if current mode is enabled, the On/Off data will be shown in flip way automatically;

Long click the **[SET]** button for setting the Auto Power ON/OFF information:

[Set Enable]: set this Auto Power ON/OFF enable or disable,00(Disable)/01(Enable);

[Set Turn On Hour: 01.]: set auto turn on hour in [00~23];

[Set Turn On Minute: 02.]: set auto turn on minute in [00~59];

[Set Turn Off Hour:03.]: set auto turn off hour in [00~23];

[Set Turn Off Minute: 04.]: set auto turn off minute in [00~59];

[Nixie Brightness]: 0(Auto-Brightness)/[1~8]for brightness(8 is the brightest);

6.Timing related Setting Mode(Optional)

* if you don't have GPS function installed, ignore it.

For timing related setting mode, it displays the **[.3.]** as index.And with the current time zone setting value behind;

Long click the **[SET]** button you can enter the miscellaneous setting mode.

[GPS Enable / Disable]: 0(Disable)/ [1] (Enable);

[Time Zone Hour:.3.1.]: Set the time zone hour; The left dot will light up when set a negative value;

[Time Zone Minute:.3.2.]: Set the time zone minute , selectable 00/30/50 ;

7.Misc Mode

For misc mode, it displays the [.4.] as index.

Long click the [SET] button you can enter the miscellaneous setting mode.

[Set NIXIE Brightness:.4.1.]: 0(Auto-Brightness)/[1~8] for brightness(8 is the brightest);

[Set LED Brightness:.4.2.]: 0(Off)/[1~3] for brightness(3 is the brightest);

[Set LED Auto Change Pattern function:.4.3.]: 0(Disable)/[01]per 1Min/[10]per 10Min/[30] per 30Min/[60] per 1hour;

[Click Beep Enable:.4.4.]: 0(Disable)/1(Enable);

[Set Beep Alert Style:.4.5.]: [0~3] for 4 different beep style;

[Set Alarm Beep Loop Times:.4.6.]: in [05~99] range;

[Set Middle dots display method:.4.7.]:[.]On 1 sec/[..]On half sec/[....]Always On/[____(Empty)]Always Off;

7.Version Display Mode

For this mode it displays the version num on NIXIE tube, like [.5. 1.00.] means current software version is 1.00;

Long click the [SET] button to enter the setting mode:

[.5.1.XXXX] IR Test Mode; It will display the decoded value of infrared codes; Can be used to determine whether the infrared remote control is working properly;


[Reset All]:set this number to [01], then click the [set] button, all the settings will be reset to the default, and the clock will reboot itself when finished.

About the noise

We use the PWM signal to adjust the NIXIE tubes' brightness, some tubes do sound when you set to the lower brightness levels because of the segments inside the NIXIE tube seems not to be installed very tightly! We can't change the tubes structure but we will try our best to reduce this noise by changing the PWM frequency, but sometimes it may not be able to fully remove it.

Tips: When you set the clock to the highest brightness level (level:8), you can stop the noise immediately, because in this level, it does not use the PWM signal.

Infra Red (IR) Remote Controller functions:

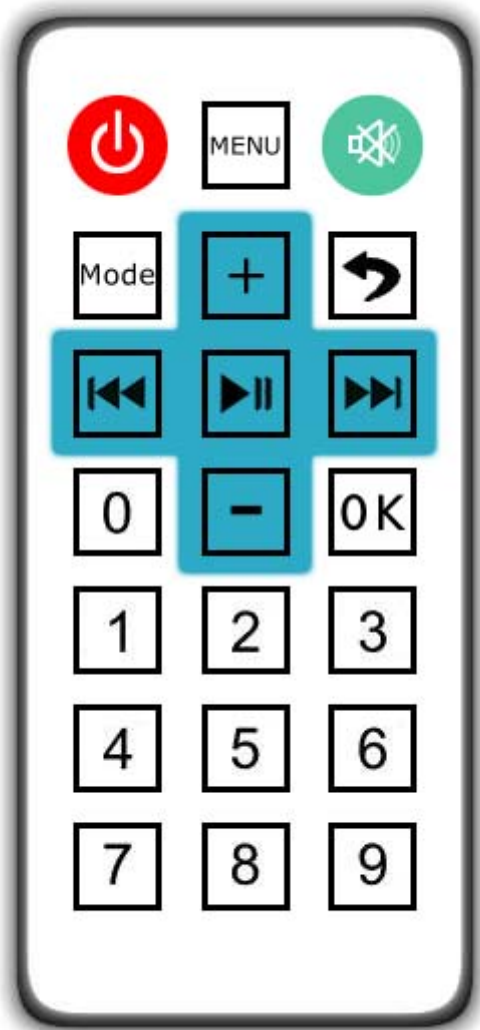

Power: Press the button to shut down/turn on the clock.

Menu: Press the button to enter the setting menu of the current display mode.

Mute: Press for mute the buzzer.

Mode: Press the button to switch the time display effects.

Return [<-']: Press the button to return the [Time display mode] directly.

[+]: Press to change values in ascending order.

[-]: Press to change values in descending order.

Previous [>>|]: Press the button to go back to the previous menu.

Next [|<<]: Press the button to go to the next menu.

PLAY [>||]: Press the button to switch the LED in Off/Pause/Off modes.

OK: Press the button to switch the LED color.

[0~9]: Press the buttons to change the values directly.

Tips:

Any IR keys can turn on the nixie clock for about 3 seconds when the clock is on the soft power off mode;

If you are trying to use the remote control for the first time, unplug the plastic film in the battery

case.

If there is no battery included, place a CR2025 battery by yourself, and make sure the battery is placed at the right polarity according to the marking on the battery holder.

Make sure the batteries in the remote control are fresh.

*To insert the battery into the remote control, follow the instructions printed on the back side of the remote control.

6-Tube Digit Nixie Clock Operations Cheat Sheet

1 st Level	2 nd Level	3 rd Level	Operation set with [+]
Long [SET]			Enter Time Display Mode [.0.x] [Display Effect 0:x]: 00:Normal/01:Fading/02:Cross Fading/03:Slow Fading /04:Flash /05:Loop/06:Random Loop;
	[SET]		[Time Format]: 24(24H without 0-leading) /024(24H with 0-leading)/12(12H)/012(12H with 0-leading)/ [.012] (12H with dot as PM);
	[SET]		[Set Hour]: set time hour in [0~23];
	[SET]		[Set Minute]:set time minute in [0~59];
	[SET]		Return to Time display
[+]			Date Display
	Long [SET]		Date Display Mode: [DATA Format]: (DMMYY)/(MMDDYY)/(YYMMDD)/(YYDDMM);
		[SET]	[Set Year]: set year in [2013.~2099];
		[SET]	[Set Month]: set month in [01~12];
		[SET]	[Set Day]: set day in [01~28,29,30,31], depends on the year and the month that you have set.
		[SET]	Return to Date display
[+]			Temperature Display Mode
	Long [SET]		[Temperature Unit]: temperature display unit, [0] for ° C, [1] for ° F ;
		[SET]	[Temperature error adjustment]: step+/-0.1° C
		[SET]	Return to Temperature Display Mode
	[+]		Alarm 1 [.1.1 HH.MM.]
		Long [SET]	[Set Hour]: set alarm hour in [00~23];
		[SET]	[Set Minute]: set alarm minute in [00~59];
		[SET]	[Set Alarm Option]: 0(Alarm OFF)/1(Alarm ON)/2(Alarm ON-except weekends).
		[SET]	Return
	[+]		Alarm 2 [.1.2 HH.MM.] (Set options same as above)
	[+]		Alarm 3 [.1.3 HH.MM.] (Set options same as above)
	[+]		Auto Power ON/OFF Display Mode 1 [.2.1]
		Long [SET]	[Set Enable]: set this Auto Power ON/OFF enable or disable: 0(Disable)/1(Enable);
		[SET]	[Set Turn On Hour]: set auto turn on hour in [00~23];
		[SET]	[Set Turn On Minute]: set auto turn on minute in [00~59];

		[SET]	[Set Turn Off Hour]: set auto turn off hour in [00~23];
		[SET]	[Set Turn Off Minute]: set auto turn off minute in [00~59];
		[SET]	[Nixie Brightness]: 0 (Auto-Brightness)/[1~8] for brightness(8 is the brightest);
		[SET]	Return
	[+]		Auto Power ON/OFF Display Mode 2 [.2.2] (Set options same as above)
	[+]		Auto Power ON/OFF Display Mode 3 [.2.3] (Set options same as above)
	[+]		Timeing related Setting Mode [.3.]
		Long [SET]	[GPS Enable / Disable]: 0 (Disable)/ [1] (Enable);
		[SET]	[Time Zone Hour:.3.1.]: Set the time zone hour; The left dot will light up when set a negative value;
		[SET]	[Time Zone Minute:.3.2.]: Set the time zone minute , selectable 00/30/50 ;
		[SET]	Return
	[+]		Misc Mode [.4.]
		Long [SET]	[Set NIXIE Brightness.4.1.]: 0 (Auto-Brightness)/[1~8] for brightness(8 is the brightest);
		[SET]	[Set LED Brightness:.4.2.]: 0 (Off)/[1~3] for brightness(3 is the brightest);
		[SET]	[Set LED Auto Change Pattern function:.4.3.]: 0 (Disable)/[01]per 1Min/[10]per 10Min/[30] per 30Min/[60] per 1hour;
		[SET]	[Click Beep Enable:.4.4.]: 0 (Disable)/1 (Enable);
		[SET]	[Set Beep Alert Style:.4.5.]: [0~3] for 4 different beep style;
		[SET]	[Set Alarm Beep Loop Times:.4.6.]: in [05~99] range;
		[SET]	[Set Middle dots display methord:.4.7.]: [.]On 1 sec/[.]On half sec/[....]Always On/ [____(Empty)]Always Off;
		[SET]	Return
	[+]		Version Display Mode [.5. 1.0.]
		Long [SET]	[IR Test Mode .5.1.]: Shows the IR remoter code which you pressed. You can test your IR remote controller in this mode;
		[SET]	[Reset All]: Set this number to [1], then click the [set] button, all the settings will be reset to the default, and the clock will auto reboot itself when finished.

[SET]=Left Button; [+]=Middle Button; [-]=Right Button;

The State Machine of 6-Tube IN-14 NIXIE CLOCK V1.0

